



Acer Aspire One 532h-2527 RAM Replacement

This guide will show how to remove the small back plate for the Acer Aspire One 532h-2527 in order to access the RAM and remove it.

Written By: Jair Burgos



INTRODUCTION

This guide will show how to remove the small back plate on your netbook. The removal of the plate is necessary to access your netbook's RAM.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Press the power button to turn off the netbook.

Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

Step 4




- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

Step 5 — RAM




- Use the #0 Phillips Screw bit with the Screwdriver to remove the single 6mm Phillips screw from the small back plate.

Step 6

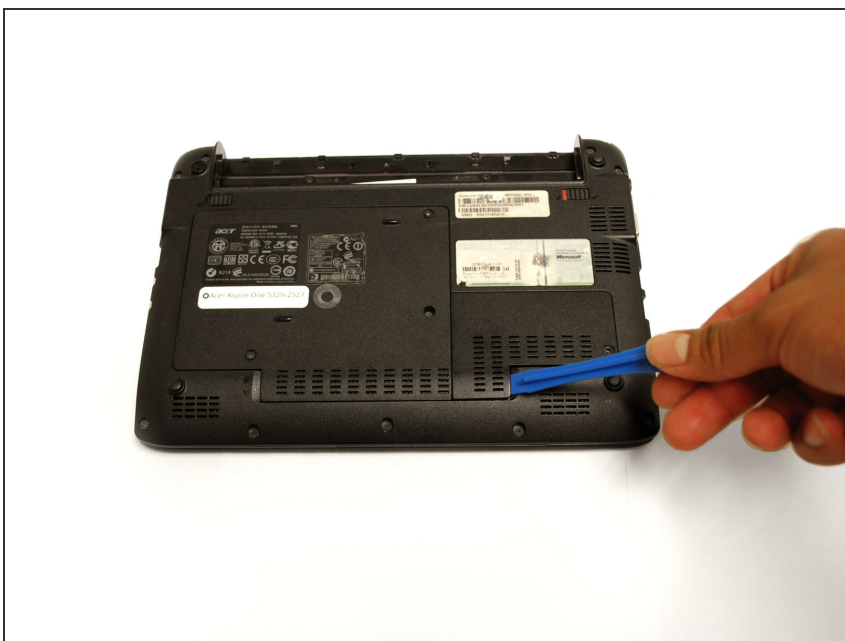

- Use the plastic opening tool on the recessed notch at the bottom of the small plate to gently lift the plate up

Step 7

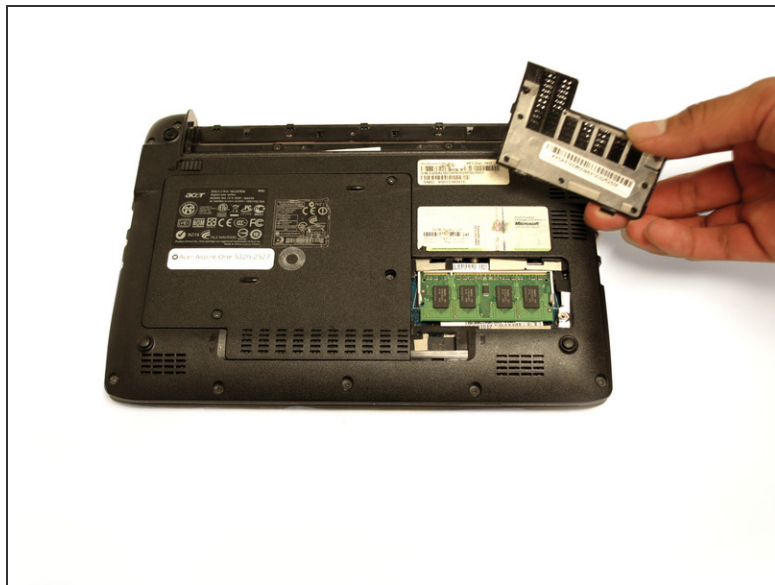

- Once the plate becomes unhinged, gently rotate the plate to take it off of the device.

Step 8



- Using two fingers, gently spread the latches on the sides of the RAM card until the RAM card props up.

Step 9



- Once the RAM card is propped up, carefully pull it out of its port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 11:02:47 AM.